


Frequenzliste

Hamburg TV-Bildsender

Stand: 10. August 2009

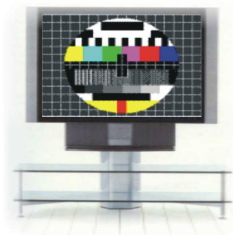

Kanal	Frequenz	Kanal	Frequenz	Kanal	Frequenz	Kanal	Frequenz
E2	48,25 MHz	S13	245,25 MHz	S39	447,25 MHz	E44	655,25 MHz
E3	55,25 MHz	S14	252,25 MHz	S40	455,25 MHz	E45	663,25 MHz
E4	62,25 MHz	S15	259,25 MHz	S41	463,25 MHz	E46	671,25 MHz
E5	175,25 MHz	S16	266,25 MHz	E21	471,25 MHz	E47	679,25 MHz
E6	182,25 MHz	S17	273,25 MHz	E22	479,25 MHz	E48	687,25 MHz
E7	189,25 MHz	S18	280,25 MHz	E23	487,25 MHz	E49	695,25 MHz
E8	196,25 MHz	S19	287,25 MHz	E24	495,25 MHz	E50	703,25 MHz
E9	203,25 MHz	S20	294,25 MHz	E25	503,25 MHz	E51	711,25 MHz
E10	210,25 MHz	S21	303,25 MHz	E26	511,25 MHz	E52	719,25 MHz
E11	217,25 MHz	S22	311,25 MHz	E27	519,25 MHz	E53	727,25 MHz
E12	224,25 MHz	S23	319,25 MHz	E28	527,25 MHz	E54	735,25 MHz
S01	69,25 MHz	S24	327,25 MHz	E29	535,25 MHz	E55	743,25 MHz
S02	76,25 MHz	S25	335,25 MHz	E30	543,25 MHz	E56	751,25 MHz
S03	83,25 MHz	S26	343,25 MHz	E31	551,25 MHz	E57	759,25 MHz
S1	105,25 MHz	S27	351,25 MHz	E32	559,25 MHz	E58	767,25 MHz
S2	112,25 MHz	S28	359,25 MHz	E33	567,25 MHz	E59	775,25 MHz
S3	119,25 MHz	S29	367,25 MHz	E34	575,25 MHz	E60	783,25 MHz
S4	126,25 MHz	S30	375,25 MHz	E35	583,25 MHz	E61	791,25 MHz
S5	133,25 MHz	S31	383,25 MHz	E36	591,25 MHz	E62	799,25 MHz
S6	140,25 MHz	S32	391,25 MHz	E37	599,25 MHz	E63	807,25 MHz
S7	147,25 MHz	S33	399,25 MHz	E38	607,25 MHz	E64	815,25 MHz
S8	154,25 MHz	S34	407,25 MHz	E39	615,25 MHz	E65	823,25 MHz
S9	161,25 MHz	S35	415,25 MHz	E40	623,25 MHz	E66	831,25 MHz
S10	168,25 MHz	S36	423,25 MHz	E41	631,25 MHz	E67	839,25 MHz
S11	231,25 MHz	S37	431,25 MHz	E42	639,25 MHz	E68	847,25 MHz
S12	238,25 MHz	S38	439,25 MHz	E43	647,25 MHz	E69	855,25 MHz

©überreicht durch Medienservice Paul Koch Tel.: 040 / 6891 2033